


COMMUNICATOR FEATURES

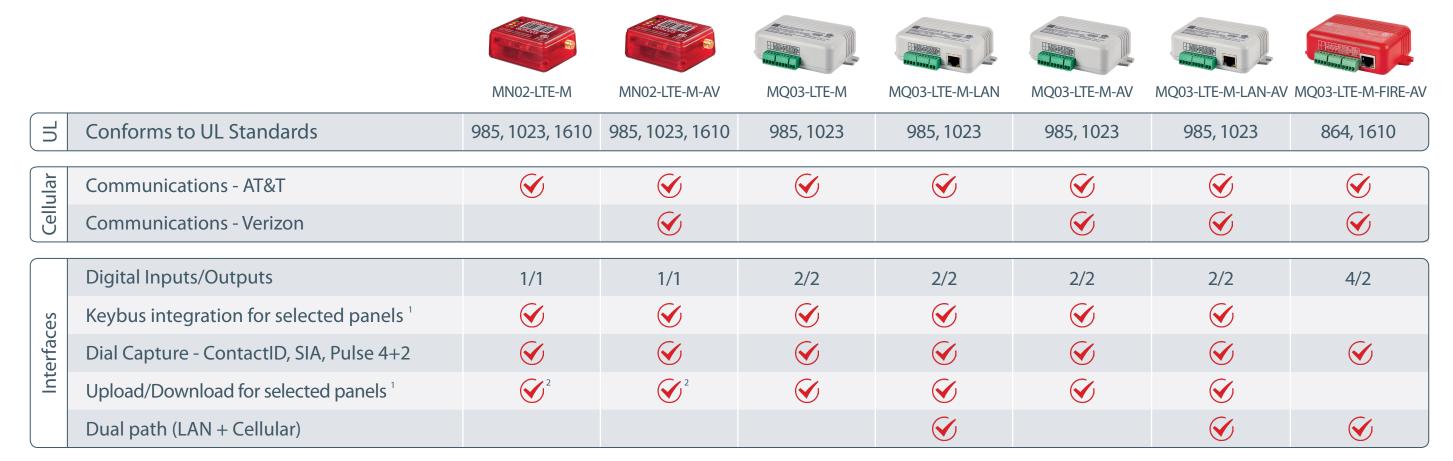

Footnotes:

¹ Panel compatibility list can be found at **support.m2mservices.com**² Additional MN01-RNGR device is needed to do upload/download with MN02-LTE-M or MN02-LTE-M-AV communicators.




WEBSITES

M2M Dealer portal - https://www.m2mdealers.com

- ✓ Assign devices to central monitoring station
- ✓ Select monthly billing option
- ✓ Change central monitoring station
- **♥** Deactivate/Reactivate devices

Instructions can be found in the Quick Installation Manual, provided with each device.

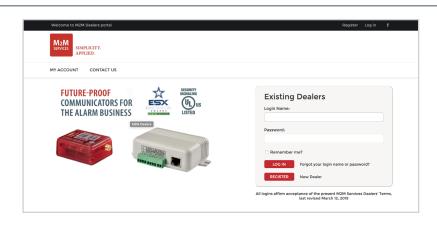



M2M Support site - https://support.m2mservices.com

- ✓ Devices' cutsheets and installation manuals
- ✓ Panel programming guidelines
- ✓ Interactive App guidelines
- ✓ Support contact form and contact details

M2M Support contacts:

<u>support@m2mservices.com</u>
800-403-7029 (6:00 AM – 6:00 PM EST, business days, Monday – Friday)

